

Work Order ID 121262

June-20-14 7:28:14 AM

121262

Page 1

Item ID: D412-664-443TRN

Accept

N900040100

Setup Start

NS1

Revision ID:

Item Name: Crosstube Turning Detail

Stop

NS2

Start Date: 6/20/14 Start Qty: 1.00

1

Cust Item ID:

Required Date: 7/04/14 Req'd Qty: 1.00

1

Customer:

Reference:

Approvals:

Process Plan: *W*

Date:

Tooling:

Date:

Run Start

NR1

QC:

Date:

SPC (Y/N):

Date:

Stop

NR2

Sequence ID/
Work Center ID

Operation
Description

Set Up/
Run Hours

Tool ID

Tool #

Plan
Code

Accept
Qty

Reject
Qty

Reject
Number

Insp.
Stamp

Draw Nbr

Revision Nbr

D412-664-443

MORI SEIKI CNC LATHE LARGE

0.00

100

Mori Seiki

Memo

0.00

Mori Seiki CNC Lathe Large

1-Cut tube on chop saw, leave extra mat'l for facing.
2-Face tube to length.

1 ϕ

amml
14/06/24

110

QC1- Inspect dimensions to dimension sheet

0.00

110

QC

Memo

0.00

Quality Control

1 ϕ

amml
14/06/24

June-20-14 7:28:14 AM

121262

Page 2

N900040100

Setup Start *NS1*

Stop *NS2*

Start Date: 6/20/14 **Start Qty:** 1.00 ***1***

Cust Item ID:

Required Date: 7/04/14 **Req'd Qty:** 1.00 ***1***

Customer:

Reference:

Approvals: **Process Plan:** _____ **Date:** _____ **Tooling:** _____ **Date:** _____

Run Start *NR1*

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop *NR2*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

120

0.00

120

MORI SEIKI CNC LATHE LARGE

Mori Seiki

Memo

0.00

Mori Seiki CNC Lathe Large

1-Fill tube with sand & install plugs on both ends

2-Turn as per Folio FB216

3- File transition lines smooth.

4-Scribe part # as per Dwg D412-664-443

FOLIO REV:

DWG REV: _____

1:30

QC1- Inspect dimensions to dimension sheet	0.00
--------------------------------------------	------

130

QC

Memo

0.00

Quality Control

QC1- Inspect dimensions to dimension sheet

140

QC8- Inspect parts - second check	0.00
-----------------------------------	------

140

OC

Memo

0.00

Quality Control

Work Order ID 121262

June-20-14 7:28:14 AM

121262

Page 3

Item ID: D412-664-443TRN Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: Stop ***NS2***
 Item Name: Crosstube Turning Detail
 Start Date: 6/20/14 Start Qty: 1.00 ***1*** Cust Item ID:
 Required Date: 7/04/14 Req'd Qty: 1.00 ***1*** Customer:
 Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
150		0.00							
150	Large Fab								
Crosstubes	Memo	0.00							
Crosstubes	Grind machining marks smooth longitude way.								
180		0.00							
180	QC15- Crosstube Dimensional Check								
QC	Memo	0.00							
Quality Control									
190		0.00							
190	Identify as per dwg & Stock Location: _____								
Packaging	Packaging								
Packaging	Memo	0.00							
	Identify and stock in kanban rack								
	Location: <u>LG</u>								

Work Order ID 121262

121262

Page 4

June-20-14 7:28:14 AM

Item ID: D412-664-443TRN

Accept

N900040100

Setup Start *NS1*

Revision ID:

Stop *NS2*

Item Name: Crosstube Turning Detail

Start Date: 6/20/14 Start Qty: 1.00 *1*

Cust Item ID:

Required Date: 7/04/14 Req'd Qty: 1.00 *1*

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start *NR1*

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop *NR2*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
200	QC21- Final Inspection - Work Order Release	0.00							
200									
QC	Memo	0.00							
Quality Control									

MLJ 1407-16

14-7-16

Picklist Print

June-20-14 7:28:14 AM

Page 1

Work Order ID: 121262

121262

Parent Item: D412-664-443TRN

D412-664-443TRN

Parent Item Name: Crosstube Turning Detail

Start Date: 6/20/14

Required Date: 7/04/14

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP REV:A NEW ISSUE 13-09-26 JLM VERIFIED BY:DD

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	-------------	--------------	---------------	----------------	--------

D6020-160		Manufactured	No				Each	19.0000		1			
-----------	--	--------------	----	--	--	--	------	---------	--	---	--	--	--

D6020-160

Crosstube Material

Location

Loc Qty

Loc Code

BSKT

11

98110

11

prelim

8

105163

8

1

mm-L 14/06/23

DART AEROSPACE LTD		Work Order: 12/262
Description: Crosstube Assembly		Part Number: D412-664-443
Inspection Dwg: D41264 Rev: A		Page 1 of 2

FIRST ARTICLE INSPECTION CHECKLIST

Inspection Sheet Drawing Dimension	Tolerance	Actual Dimension	Accept	Reject	Method of Inspection	Comments
SIDE A						
	7.98	± 0.060	7.986	/	vern	CNC-08
	0.500	± 0.010	.500	/	RG	
	2.990	± 0.005 $- 0.000$	2.993	/	mic	CNC-04
	2.776	± 0.005 $- 0.000$	2.777	/	mic	CNC-04
	2.776	± 0.005 $- 0.000$	2.781	/		
	2.880	± 0.005 $- 0.000$	2.882	/		
	2.990	± 0.005 $- 0.000$	2.995	/		
	3.100	± 0.005 $- 0.000$	3.101	/	mic	CNC-05
	3.250	± 0.005 $- 0.000$	3.250	/	II	
SIDE B						
	7.98	± 0.060	7.980	/	vern	CNC-08
	0.500	± 0.010	.500	/	RG	
	2.990	± 0.005 $- 0.000$	2.992	/	mic	CNC-04
	2.776	± 0.005 $- 0.000$	2.778		mic	CNC-04
	2.776	± 0.005 $- 0.000$	2.779			
	2.880	± 0.005 $- 0.000$	2.882	/		
	2.990	± 0.005 $- 0.000$	2.994	/		
	3.100	± 0.005 $- 0.000$	2.101	/	mic	CNC-05
	3.250	± 0.005 $- 0.000$	2.254	/	II	
	130.100	± 0.060	130.090	/	tape	LG-11


$$Z = 50.094 = 3.087$$

$$Z = 41.000 = 2.977$$

$$Z = 32.600 = 2.874$$

DART AEROSPACE LTD		Work Order: 171262
Description: Crosstube Assembly		Part Number:
Inspection Dwg:	Rev:	Page 2 of 2

WALL THICKNESS MEASUREMENT

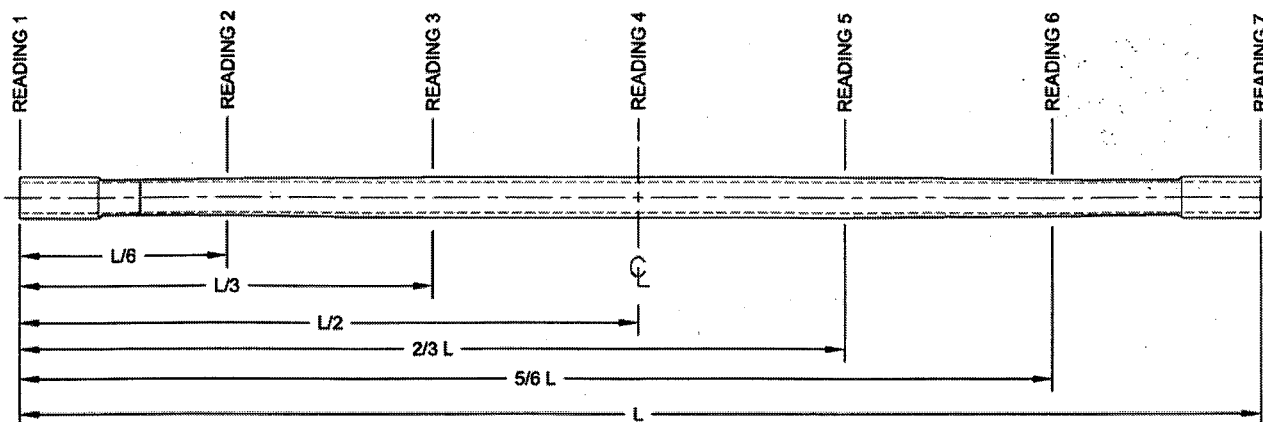

Location	WALL THICKNESS MEASUREMENT (IN)				Deviation Δw (max-min)	TOLERANCE
	w1	w2	w3	w4		
READING 1 L = 0"	.310	.323	.294	.279	.044	
READING 2 L = 21.5	.265	.212	.180	.180	.032	
READING 3 L = 43.5	.317	.329	.301	.299	.030	
READING 4 L = 65	.433	.437	.433	.426	.011	
READING 5 L = 86.5	.311	.313	.314	.315	.004	
READING 6 L = 108.5	.188	.191	.207	.267	.019	
READING 7 L = 130.10	.300	.303	.305	.305	.005	

Calibration Result

Actual Block Thickness: .100 .500

Sitiescan 250 Measured Thickness: .100 .500

Measured by: mm.L	Audited by: JW	Preliminary Approval:
Date: 14/06/20	Date: 14.07.07	Date:

Rev	Date	Change	Revised by	Approved
B	10.04.14	Added preliminary approval	KJ	
C	12.06.01	Wall thickness form added	KJ	

Item	Qty -443	Part Number	Description
1	X	D412-664-443	CROSSTUBE ASSEMBLY (412 HI AFT)
2	1	D6020-132	CROSSTUBE MATERIAL (132" MIN. LENGTH)
3	2	D3595-063-530	RUBBER CUSHION
4	1	D4909-1	SUPPORT
5	2	D4910-1	CHAFING SHIELD
7	4	MS21920-26	CLAMP
8	2	MS21920-28	CLAMP
9	A/R	SCOTCH-WELD DP460	EPOXY ADHESIVE, 3M SCOTCH-WELD
10	A/R	PROSEAL 890	SEALANT

GENERAL NOTES:

- 1) MATERIAL: MANUFACTURED FROM D6020-132
FINISHED LENGTH = 130.10±0.060 (BEFORE BENDING/TRIMMING)
- 2) FINISH: PRIME INSIDE AND OUTSIDE PER DART QSI 005 4.2
MASK UNDERSIDE OF CROSSTUBE AS SHOWN (ZN C6-2, HATCHED AREA)
PAINT OUTSIDE PER DART QSI 005 4.2
AFTER PAINTING, REMOVE MASKING AND APPLY MATTE CLEAR COAT PER DART QSI 005 4.2
- 3) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED.
- 4) UNITS: INCHES UNLESS OTHERWISE NOTED.
- 5) BREAK SHARP EDGES: 0.005 TO 0.010 MAX.
- 6) IDENTIFICATION: SCRIBE DART P/N "D412-664-443" AND B/N ON INSIDE OF CUFF PER DART QSI 044 6.4 (VIBRATING STYLUS)
- 7) WEIGHT: 90.2 lb AFTER MACHINING
86.7 lb FINISHED WEIGHT
- 8) PART IS SYMMETRIC ABOUT CENTERLINE.
- 9) EXTREME CARE MUST BE TAKEN TO PROTECT THE OUTSIDE SURFACE OF THE TUBE. THE OUTSIDE SURFACE MUST BE SMOOTH AND FREE FROM SURFACE DEFECTS SUCH AS SCRATCHES, NICKS, OR DENTS. DEFECTS UP TO 0.005" MAY BE BLENDED OUT LONGITUDINALLY. CIRCUMFERENTIAL GRIND MARKS ARE UNACCEPTABLE.

BENDING

- 10) BEND PROGRESSIVELY WITH A MINIMUM OF 8 PASSES. MAXIMUM TUBE FLATTENING DUE TO BENDING IS 7% (BASED ON O.D.) IN LOWER HALF OF R35 BEND AND 6% (BASED ON O.D.) ON REMAINING TUBE.
- 11) LIQUID PENETRANT INSPECT OUTSIDE SURFACE OF CROSSTUBE PER QSI 038. TO BE PERFORMED AFTER FINAL POST-BEND GRINDING. ANY ADDITIONAL GRINDING REQUIRES ANOTHER LPI INSPECTION.

ASSEMBLY

- 12) INSTALL D4909-1 CENTER SUPPORT USING A 0.04" TO 0.07" THICK LAYER OF SCOTCH-WELD DP460 PER QSI 015.
- 13) INSTALL MS21920-28 CLAMPS WITH D3595-063-530 RUBBER CUSHIONS TO SECURE THE D4909-1 SUPPORT ON TOP SIDE OF THE CROSSTUBE. ENSURE CLAMPS ARE ON TOP OF CROSSTUBE SUPPORT.
- 14) IF NOT ALREADY PRESENT ON CHAFING SHIELD, APPLY A THIN COAT OF PROSEAL 890 ON INSIDE CONCAVE SURFACE OF D4910-1 CHAFING SHIELD AND LET CURE PER MANUFACTURER'S INSTRUCTIONS. INSTALL PROSEALED D4910-1 CHAFING SHIELD ONTO CROSSTUBE BY APPLYING A THIN COAT OF PROSEAL 890 ONTO CROSSTUBE. BE SURE TO ELIMINATE ANY AIR GAPS.
- 15) TORQUE CLAMPS ON D4909-1 SUPPORT 80 TO 100 IN-LB. TORQUE CLAMPS ON D4910-1 CHAFING SHIELD 40 TO 50 IN-LB. ENSURE AT LEAST 1.5 THREADS SHOWING IN SAFETY AND THAT NUT HAS NOT BOTTOMED-OUT AFTER TORQUING. PRIOR TO PACKAGING, RE-CHECK TORQUE ON CLAMPS AFTER ADHESIVES HAVE CURED FOR 24 HOURS.




A	NEW ISSUE	CP	14.04.01
REV.	DESCRIPTION	BY	DATE
DESIGN			
DRAWN			
CHECKED			
MFG. APPR.			
APPROVED			
DE APPR.			
DATE	14.04.01		

DART AEROSPACE LTD
HAWKESBURY, ONTARIO, CANADA

DRAWING NO. D412-664-443
REV. A
SHEET 1 OF 4


TITLE CROSSTUBE ASSY (412 HI AFT)
SCALE NTS

COPYRIGHT © 2013 BY DART AEROSPACE LTD
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD

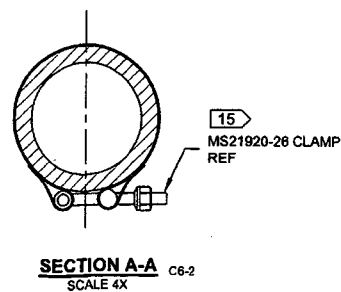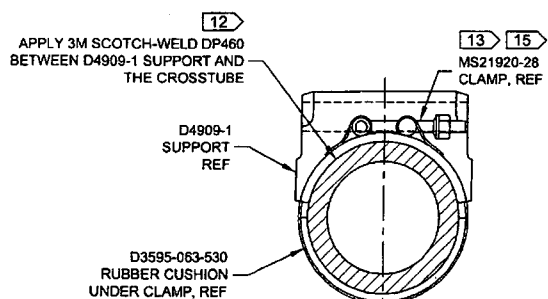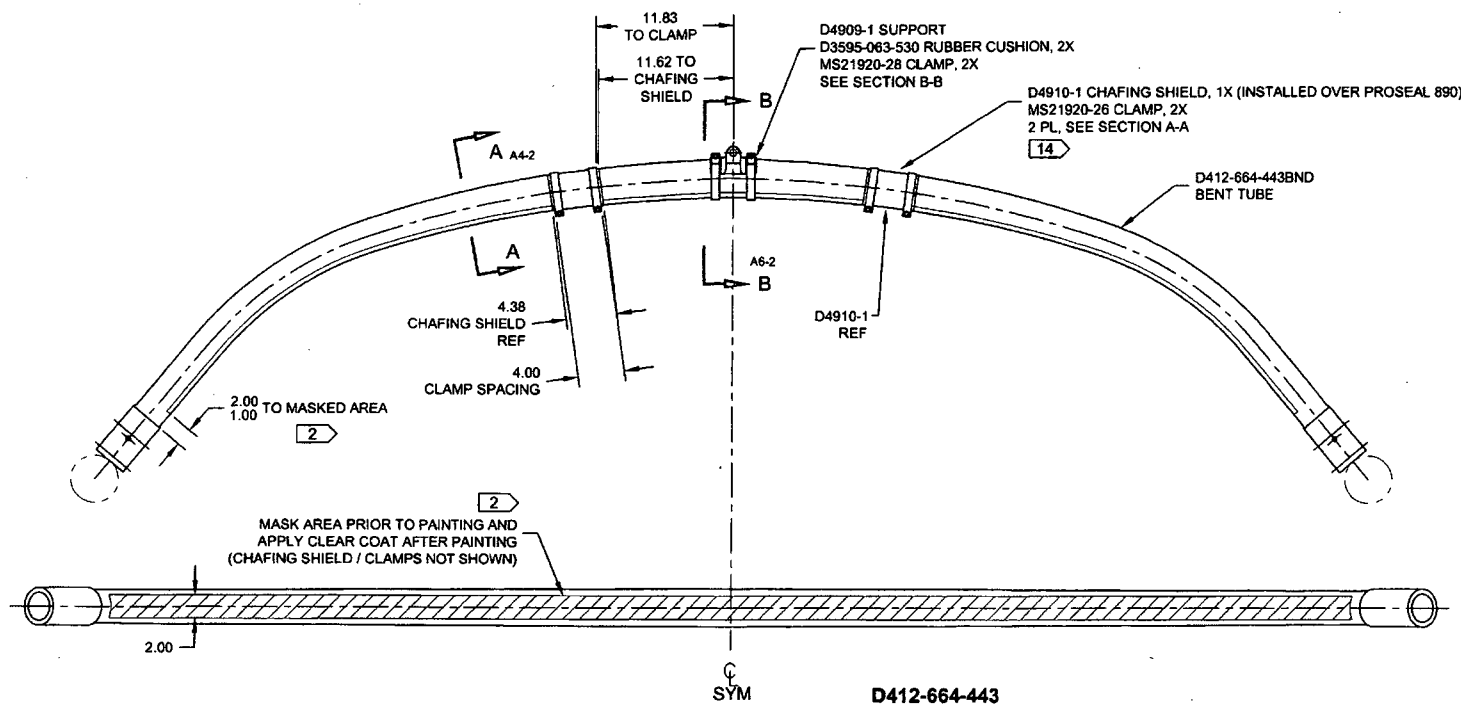


RELEASED
2014-05-26
WJD

DESIGN	40	DART AEROSPACE LTD	
DRAWN	40	HAWKESBURY, ONTARIO, CANADA	
CHECKED	DW	DRAWING NO.	REV. A
MFG. APPR.	MS	D412-664-443	SHEET 2 OF 4
APPROVED	MS	TITLE	SCALE
DE APPR.	MS	CROSSTUBE ASSY (412 HI AFT)	NTS
DATE	14.04.01	COPYRIGHT © 2013 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR REPRODUCED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

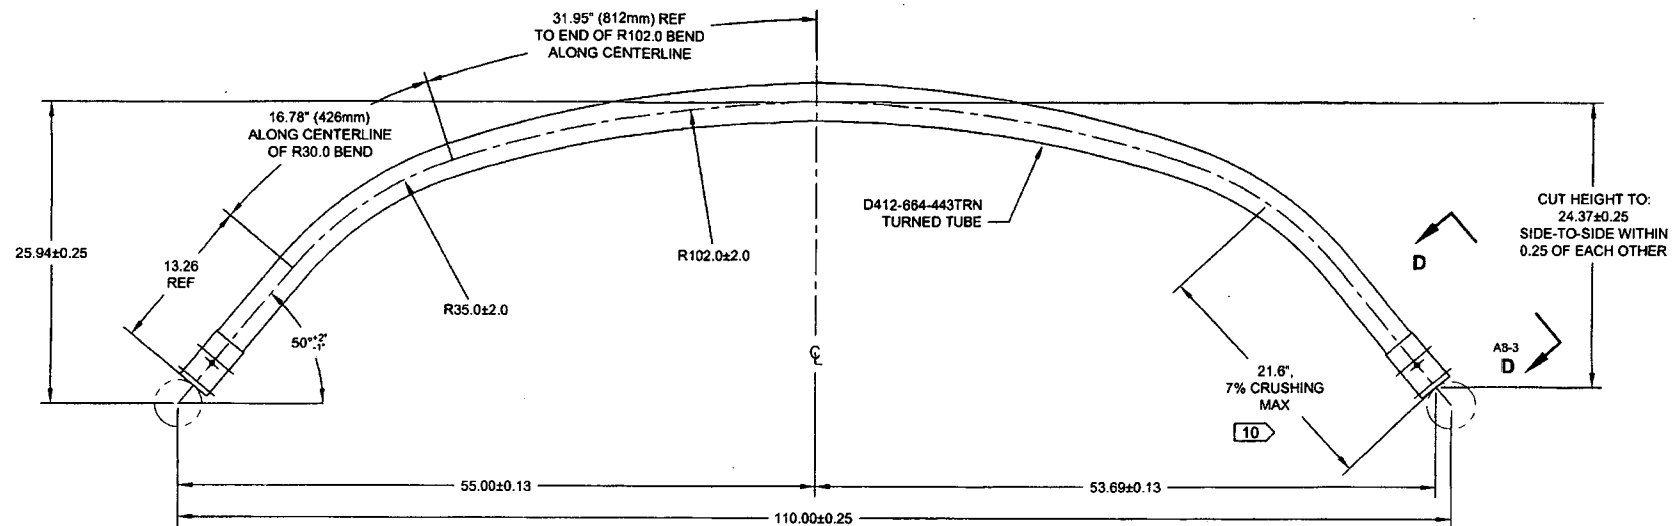


D412-664-443BND 10
BENDING DETAIL

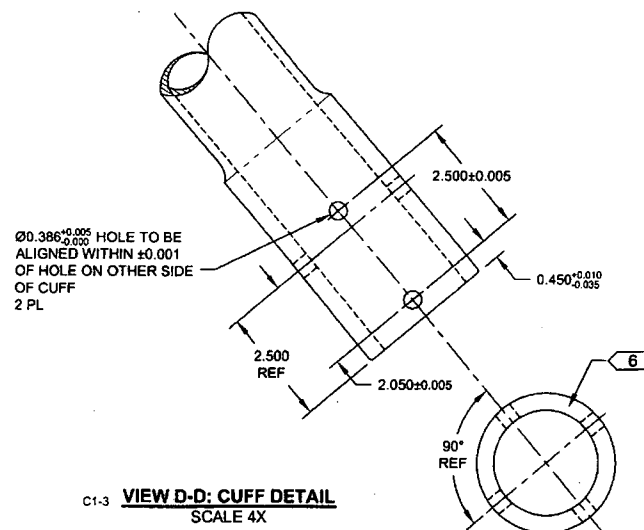


C1-3 **VIEW D-D: CUFF DETAIL**
SCALE 4X

RELEASED
2014-05-26


DESIGN	<i>[Signature]</i>	DART AEROSPACE LTD	
DRAWN	<i>[Signature]</i>	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. A
MFG. APPR.	<i>[Signature]</i>	D412-664-443	SHEET 3 OF 4
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	CROSSTUBE ASSY (412 HI AFT)	NTS
DATE	14.04.01	<small>COPYRIGHT © 2013 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR REPRODUCED IN ANY MANNER WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

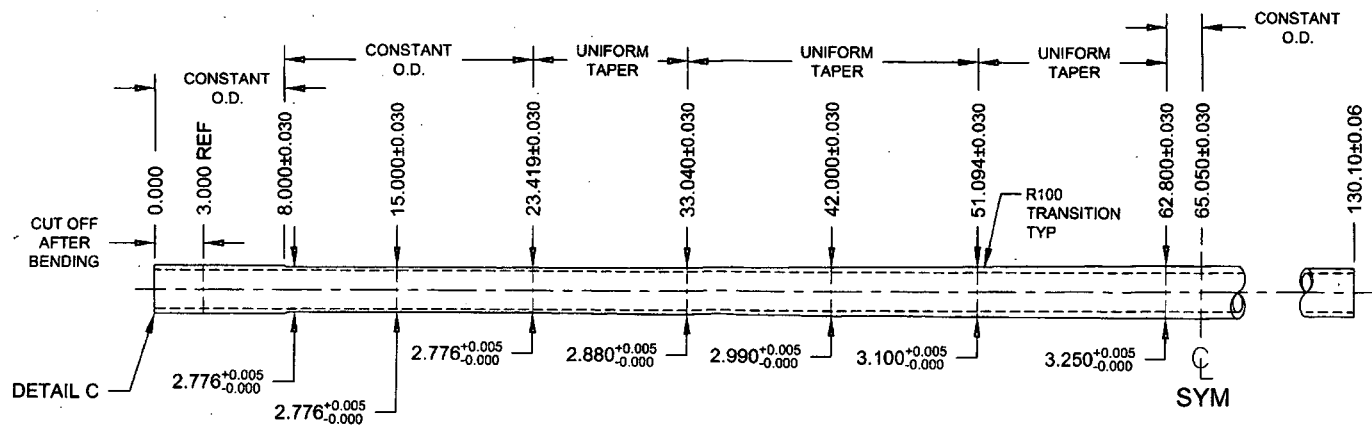

**D412-664-443TRN
TURNING DETAIL**

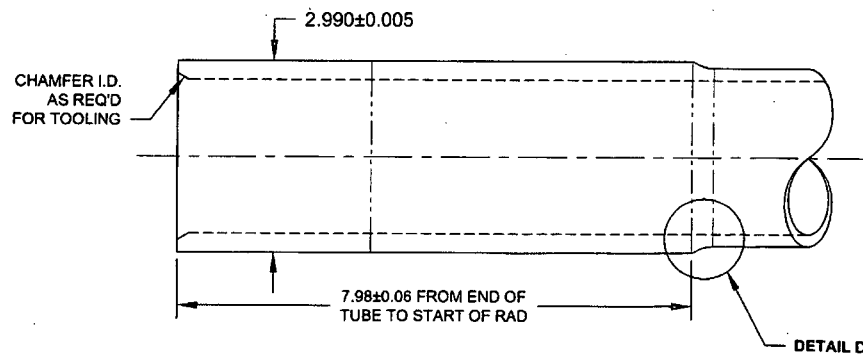

**DETAIL C:
CUFF TRANSITION
SCALE 4X**

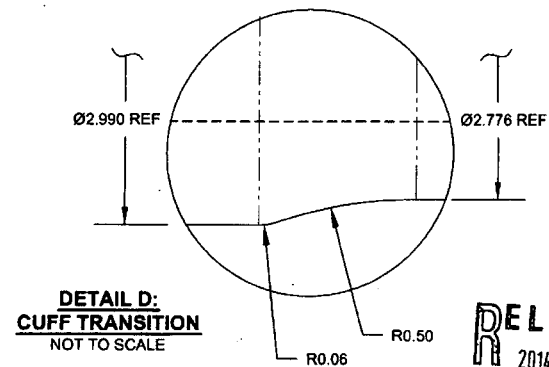

**DETAIL D:
CUFF TRANSITION
NOT TO SCALE**

RELEASED
2014-05-26

DESIGN	DP	DART AEROSPACE LTD	
DRAWN	DP	HAWKESBURY, ONTARIO, CANADA	
CHECKED	DL	DRAWING NO.	REV. A
MFG. APPR.		D412-664-443	SHEET 4 OF 4
APPROVED		TITLE	SCALE
DE APPR.		CROSSTUBE ASSEMBLY (412 HI AFT)	NTS
DATE	14.04.01	<small>COPYRIGHT © 2013 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

